


SIDELINER AIR SYSTEM INSTALLATION

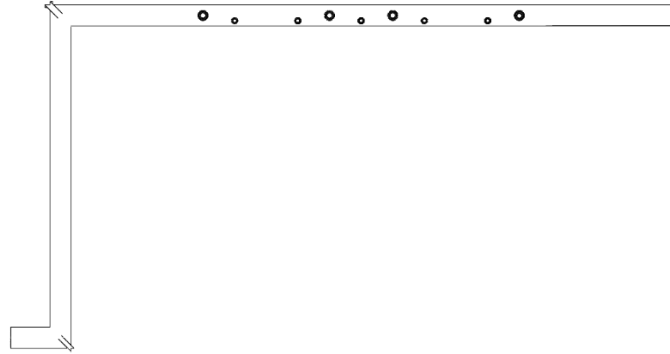

1. SCOPE

- 1.1. To provide instruction for installing the SidelinER Air System.

2. REQUIRED COMPONENTS

- 2.1. SidelinER PRO or FLEX
- 2.2. Air duct
- 2.3. Air blower
- 2.4. 110V power source

3. INSTALLATION

- 3.1. Setup your SidelinER frame and attach the cover.
- 3.2. Remove the air duct from the package and locate the hook and loop attachment points.
 - 3.2.1. The air duct inlet should be placed on the same side you intend to collapse your SidelinER towards.
- 3.3. Adhesive backed hook fastener has been pre-attached to the air duct. Remove the hook section from the loop side. Ensure the tube is clean and dry where the adhesive will be applied. Remove the clear plastic backing from the hook fastener and place the hook fastener on the vertical tube just below the window seam.



Figure 3.3 Attach the Hook Fastener

3.4. Repeat step 3.3 for the diagonal supports.



Figure 3.4 Hook Fastener Locations

- 3.5. Attach the air duct to the hook fastener on the frame.
- 3.6. Attach the air duct inlet to the air blower with the drawstring. Ensure the drawstring is tied well to prevent the air duct from coming loose during operation.
- 3.7. Plug in the air blower.